

## Fitting Instructions – Atlantic DIN Latch/Atlantic DIN Radius Latch

# **ALKDINL60(finish)/ALKDINRL60(finish)**

Date Modified: 19/02/2024

Last modified by: Brock Hutchins

For best results when fitting Atlantic UK DIN Latch follow these instructions.

Atlantic recommends this product is fitted by a joiner.

Before beginning installation, check the product is as required/ordered.

Separate out all components supplied as follows:

- DIN Latch
- 3no. Machine Screws for holding face plate.
- Faceplate
- Keep
- 5no. Wood Screws
- Dust Box

- 1) Mark out the desired location of the DIN Latch on the door
- 2) Using the faceplate, mark out and drill/router out for the fore-end, making sure you account for both the faceplate and the fore-end that is attached to the lock body.
- 3) Drill out for the body, this is standard across all DIN locks and latches, ensuring that there is clearance for the latch to seat all the way in.
- 4) Once this fits properly, use 2no of the wood screws included and fasten the lock into the mortice you have drilled out.
- 5) Mark out and drill out for the spindle of the latch, the backset on this is 60mm and it is 25mm above center line of the faceplate.
- 6) Using the 3no machine screws, attach the fore-end to the main body of the lock, and test the latch tongue for function.
- 7) Using the latch tongue, mark out for the keep on the rebate of the door frame.
- 8) Using the keep, mark out where you will need to drill/router out for this, as well as the dust box.

- 9) Drill/router out for the keep and dust box, and then test for fit. Once fitting correctly, fix in place using 3no. of the wood screws provided.
- 10) Once you have fitted the handle to the latch, check for functionality and adjust as needed.