









**EVOKIT**Setup instruction





### KIT CONTENTS


### Standard equipment

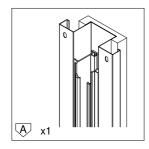


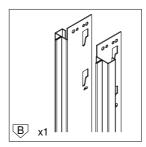


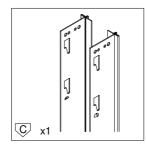


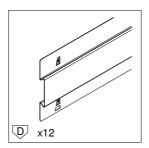


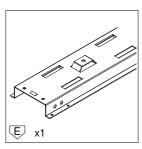

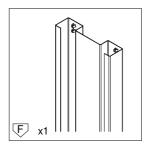


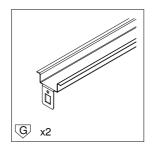

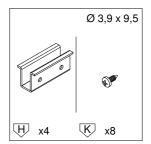


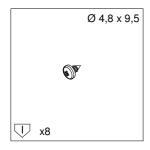



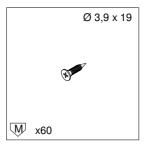

#### Tools

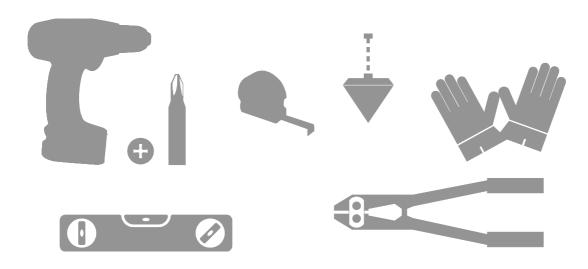









#### Overall view

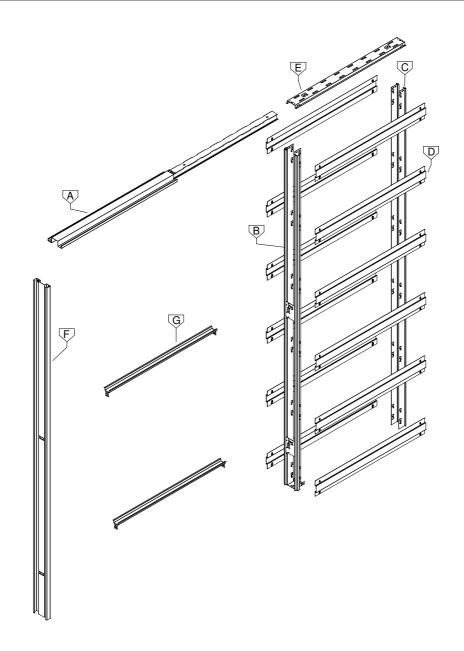

#### **INDEX**


Setup for 100 finished wall	3-6
Setup for 125 finished wall	7-10
Setup of plasterboard	11-13

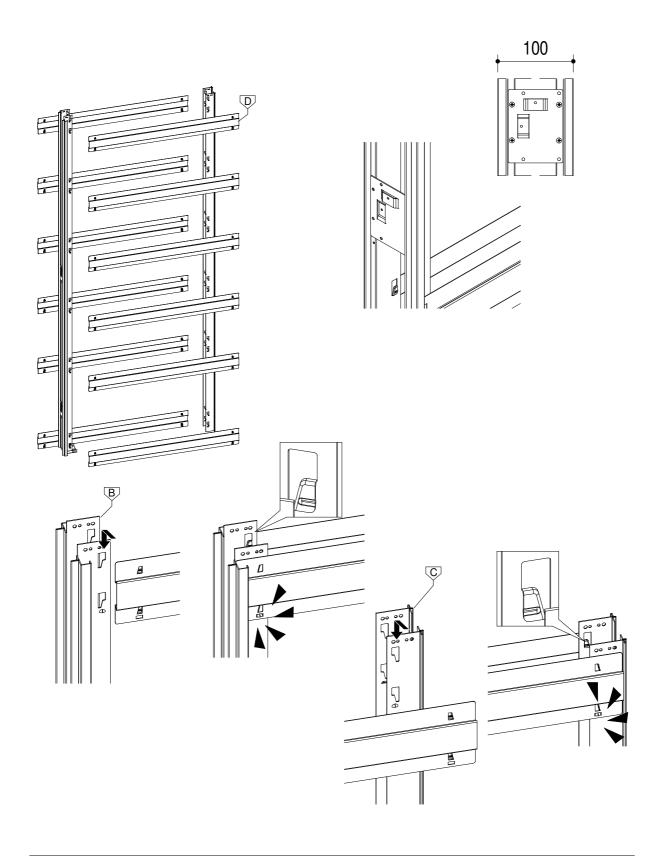











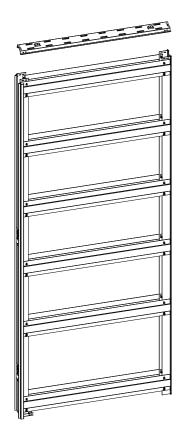

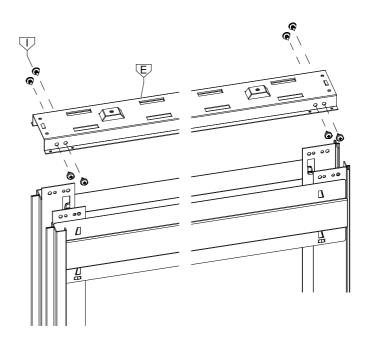

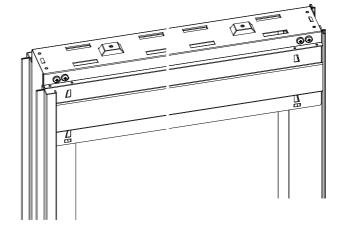


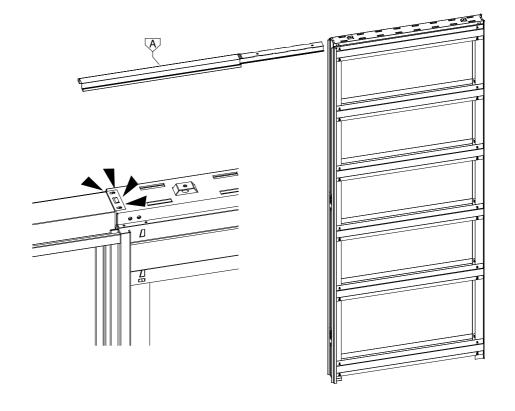


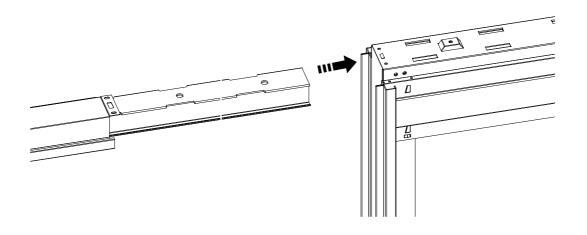






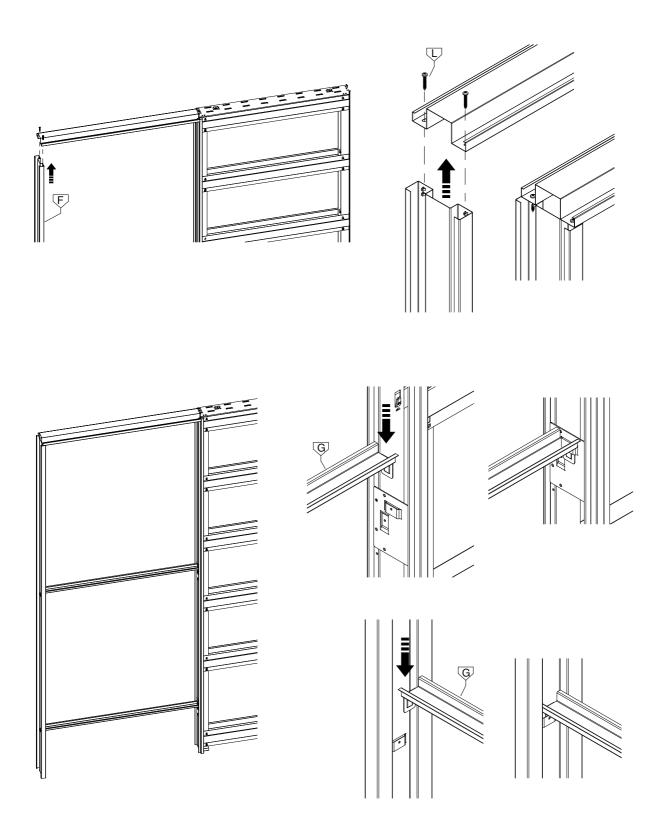

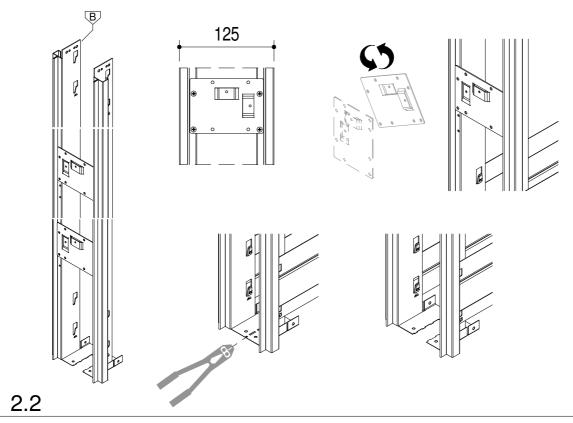

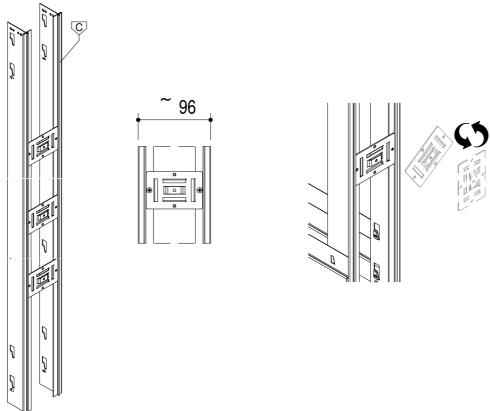



1







2.3

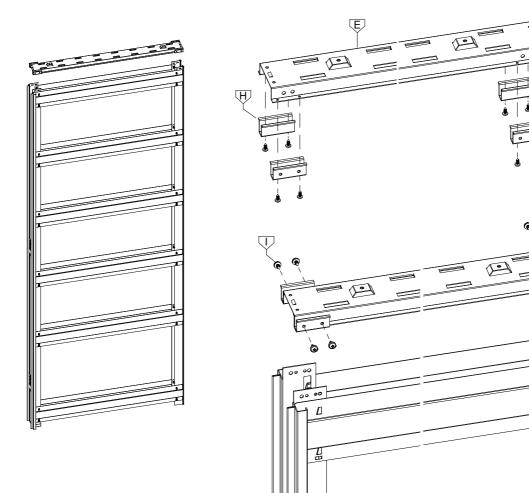

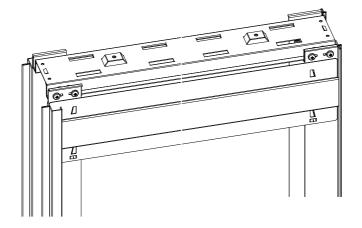


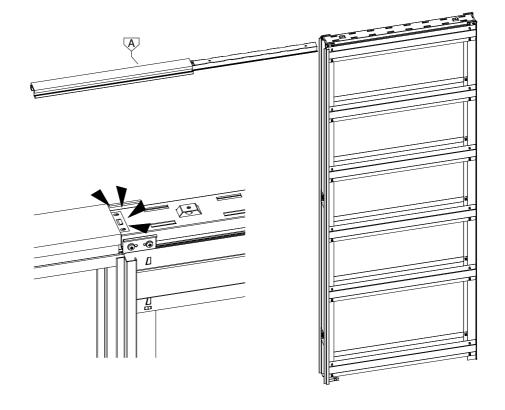


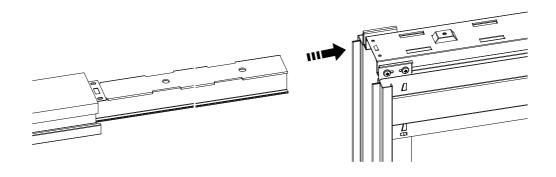






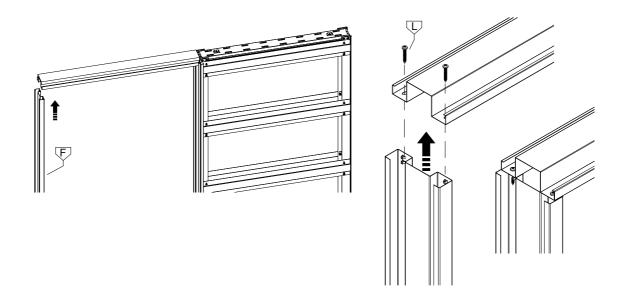


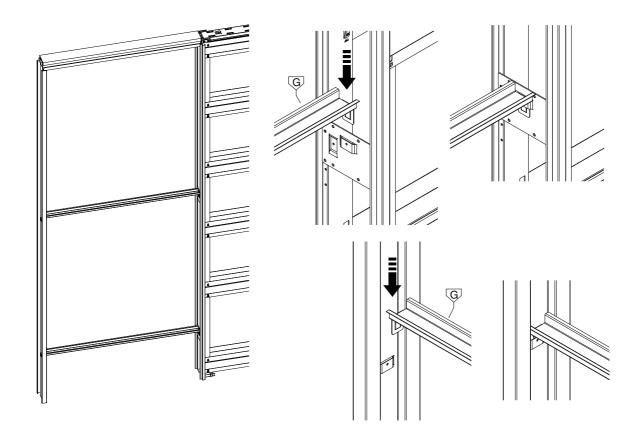

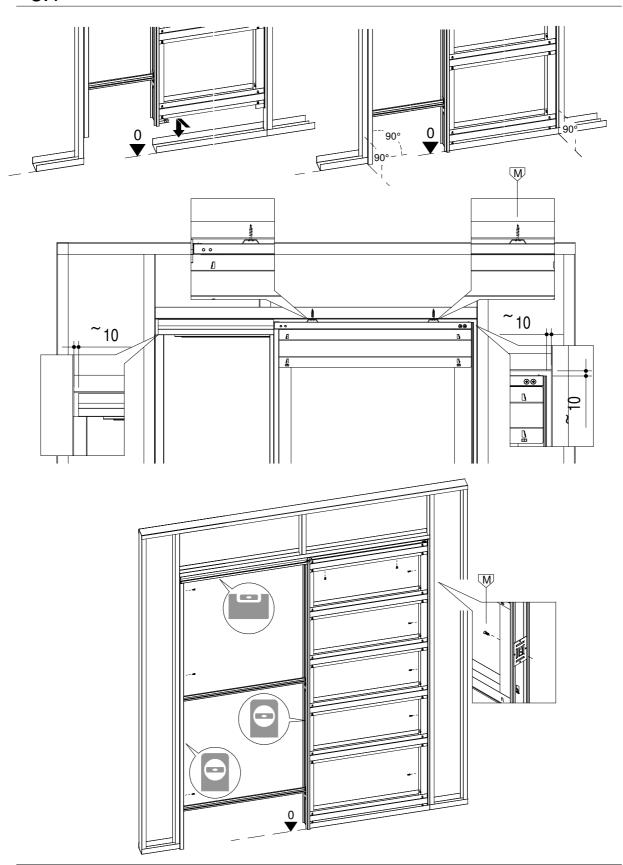







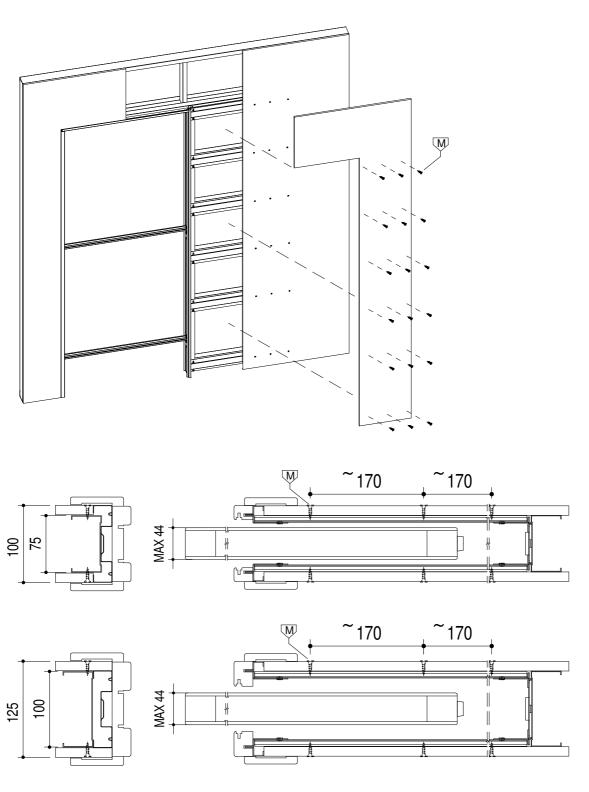




**ATTENTION: USE SHORT SCREWS INCLUDED IN KIT!** 

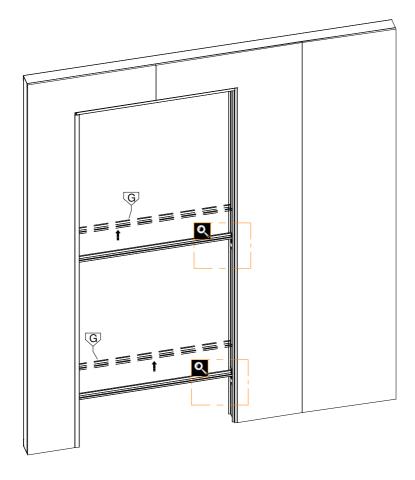


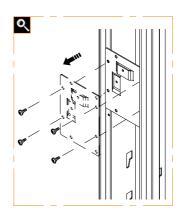

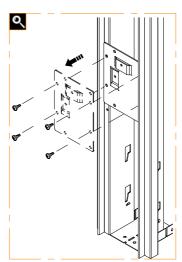





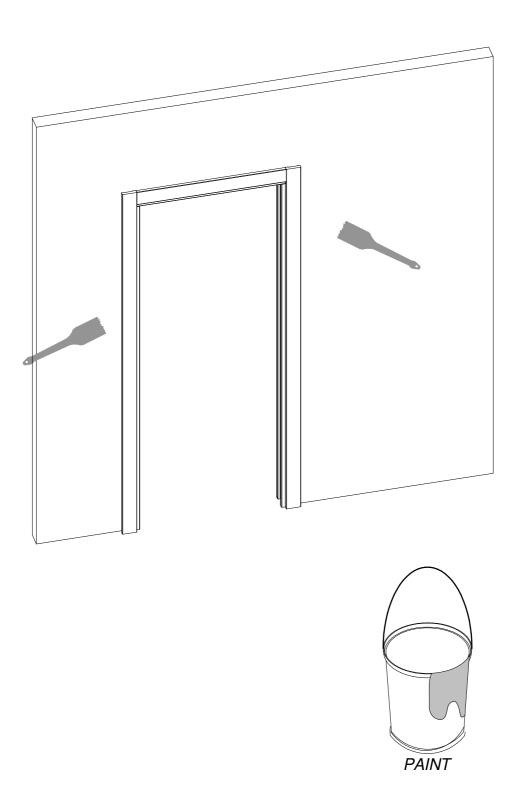









T. +39 (0)883535781



info@ermetika.it



www.ermetika.it



https://www.youtube.com/c/ermetikasrl